

# AH

Mounting instructions - Cover for LL-12 to LL-75

### **Delivery scope:**

- Cover
- Mounting plate with blind rivet nuts M4
- Ring screw M8 with associated selflocking nut
- 4 spacers M6x35
- 4 screws M6x14
- 2 screws M4x14
- 2 cover caps, white

## **Required tools:**


- Allen wrench size 3 and 4
- Wrench size 10 and 13

(Torque for M6 screws: max. 7 Nm;

for M4 screws: max. 2 Nm)

## Mounting:

When correctly fitted, the cover leaves a gap of approx. 25 mm through which the cables can be fed.

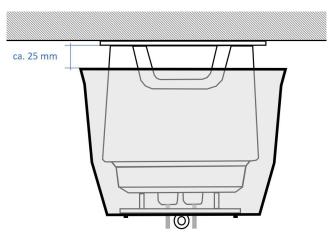

Penny Hydraulics Ltd reserves the right to make changes to the technical data without prior notice. Penny Hydraulics Ltd assumes no liability for typesetting and printing errors. No claims can be derived from the information in this data sheet.

LUXLIFT | pennyhydraulics.com | sales@pennyhydraulics.com | +44 (0) 1246 811475

#### 1.

Start with mounting the ring screw with the selflocking nut into the center hole. Ensure that the countersinks of the screws are on the ring side.

the

cables

through

Screw the 4 spacers to the lift.

feed

plate below the spacers.

#### 2.

Afterwards

the designated holes and position the mounting UXLIES

# 3.

Attach the mounting plate with the screws (M6x14) by screwing them into the spacers.

## 4.

Feed the cables and the ring screw through the designated holes.

Align the holes "C" of the Cover with the identical holes on the mounting plate.

Fix the cover with the screws (M4x14).

Use the cover caps if you are not using one, or both, of the cables.



