

MP-U-E


Mounting instructions - Lower Mounting plate for LL-12 to LL-70

Delivery scope:

- Mounting plate
- Ring screw M6 with associated self-locking nut
- 4 Spacer M6x25
- 4 screws M6x14

Required tools:

- Allen key size 4
 - Wrench size 10
- (Torque for M6 screws: max. 7 Nm)

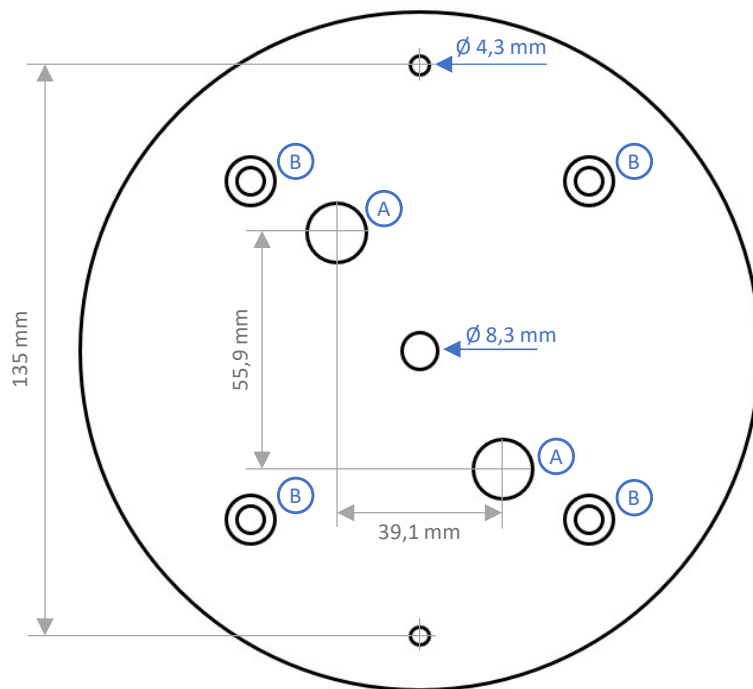

Penny Hydraulics Ltd reserves the right to make changes to the technical data without prior notice. Penny Hydraulics Ltd assumes no liability for typesetting and printing errors. No claims can be derived from the information in this data sheet.

I. Mounting without ring screw

Screw the 4 spacers to the lift.
Feed the cables through holes "A" and attach the mounting plate to the lift through holes "B" using the screws and a size 4 Allen key.

When mounting the light fixture, make sure that its centre of gravity is centrally located below the lift plate.



II. Mounting with Ring Screw

Mount the ring screw with the self-locking nut into the center hole.
Screw the 4 spacers to the lift.
Feed the cables through holes "A" and attach the mounting plate to the lift through holes "B" using the screws and a size 4 Allen key.

Now attach your lamp or object on the ring screw.

