

°°°°

Mounting instructions – Recessed mounting plate for LL-12 and LL-70


Delivery scope:

- Recessed mounting plate
- 4 spacers M6x35
- 4 screws M6x20
- 4 spacer sleeves 10 mm

Required tools:

- Allen wrench size 4
- Wrench size 13

(Torque for M6 screws: max. 7 Nm)

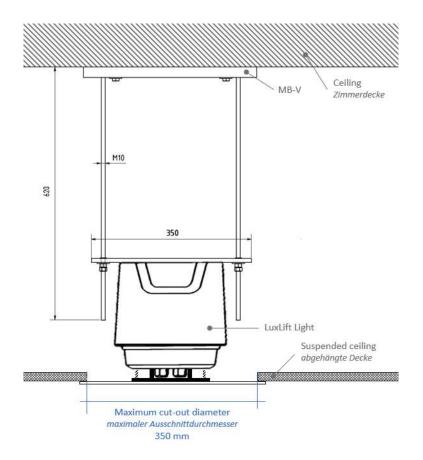

Penny Hydraulics Ltd reserves the right to make changes to the technical data without prior notice. Penny Hydraulics Ltd assumes no liability for typesetting and printing errors. No claims can be derived from the information in this data sheet.

LUXLIFT | pennyhydraulics.com | sales@pennyhydraulics.com | +44 (0) 1246 811475

1.

Screw the 4 spacers to the lift.

Feed the cables through the designated holes and position the inspection cover below the spacers.



2.

Slide the spacer sleeves over the screws and fit them to the underside of the spacers so that the recessed cover is screwed tight in the process.





Penny Hydraulics Ltd reserves the right to make changes to the technical data without prior notice. Penny Hydraulics Ltd assumes no liability for typesetting and printing errors. No claims can be derived from the information in this data sheet.